



# 1. Charge

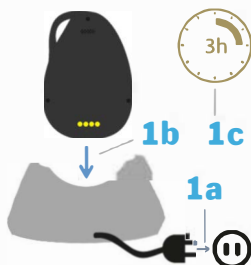

Charge the PEBBELL for at least 3-4 hours until the RED light on the front of the docking station stops flashing and becomes solid.

For further information visit <http://www.pebbell-gps.com>

# 2. Associate

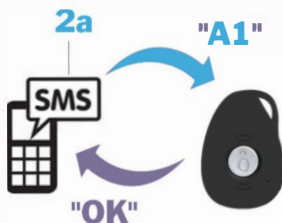

Send an SMS with the text "A1", from your mobile to the PEBBELL. If successful, you will receive the reply: "OK!" and your mobile will be stored as the first contact number (A). The PEBBELL can store up to three contact numbers (see manual for more details).

# 3. Locate



Send an SMS with the text "LOC" from your mobile to the PEBBELL. When used outdoors, or near a window, it will reply with an SMS detailing its current location and a link to Google maps.

# PEBBELL<sup>®</sup> SOS button Call button



speaker

Charging Contacts



LED indicator

mic



on/off

micro USB

2017 © HoIP Telecom Ltd

# 4. On/Off

To turn on the PEBBELL, press the **Call** button for 1 second. The device will also be turned on when it is placed in its docking station for charging.

To turn off the PEBBELL, press and hold the **Call** and **SOS** buttons together for 1 second.

# 5. Phone call

Press and hold the **Call** button for 3 seconds until you hear a beep. The green LED light will start flashing and the PEBBELL will initiate a voice-call to the associated contact number.

To end the phone call, press the **SOS** button.

# 6. SOS alarm

Press and hold the **SOS** button for 3 seconds until the PEBBELL vibrates. The green LED light will start flashing rapidly to confirm your request.

An SMS with the text "Help me!" will be sent to all the contact numbers (A, B & C).

The PEBBELL will also dial the 3 contact numbers in sequence, starting with the first contact number (A), until it is connected.

To end the SOS alarm, press the **SOS** button.